



# Bravura Installation Guide-All Patio Function Deadbolts

## 1. Door Prep

For Doors Thickness:  $1\frac{3}{8}$ " to  $2\frac{1}{4}$ "

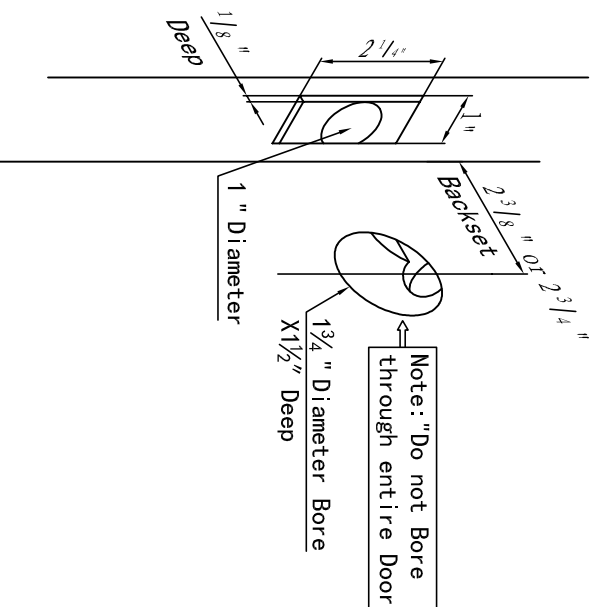

## 2. Install Latch

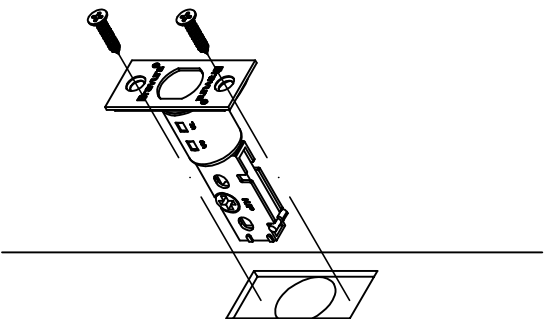


Inside of Door



## 3. Install Mounting Plate and Thumbturn

Door Thickness:  $1\frac{3}{4}$ " -  $2\frac{1}{2}$ "

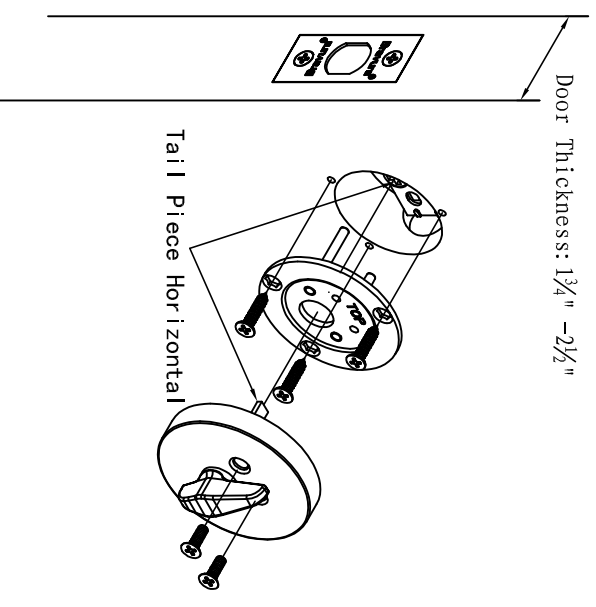

## 4. Exterior



## 5. Door Jamb Prep

