

Bravura Keyed Entry Quick-Install Instructions

⇨ 1) Use template on the bottom of the back page to drill the mounting holes.



Figure 1

⇨ 2) Adjust latch backset to fit your door, 2 3/8" or 2 3/4" (figure 1). Insert latch mechanism into door. Attach latch-face with provided wood screws (figure 2).



Figure 2



Figure 3

⇨ 3) Insert the exterior half (with cylinder) of the lockset into the door (figure 3). **MAKE CERTAIN THAT THE ROSETTE IS SCREWED AS FAR AS POSSIBLE AWAY FROM THE LEVER/KNOB, AND THAT THE LEVER/KNOB ROTATES SMOOTHLY IN BOTH DIRECTIONS.**

⇨ 4) the half of remove box/bag turning 4b), and have



Loosen the set-screws on knob/lever on the interior the lockset (figure 4a) and knob/lever (keep in to prevent damage). Unscrew rosette by counter-clockwise (figure place in box. You will now the interior lock-body.



Figure 4b

INSTRUCTIONS FOR INSTALLATION ON NEW WOOD DOORS

① Cut out the template and fold it along the dotted line. Place the folded template against the edge of the door so that the mark (#2) is approximately 38" above the floor. Mark the center of the door edge using the correct location for your door thickness. (NOTE: deadbolt should be 5.5" above door lock.)


② Still holding the template in place, mark the center of the door face hold (#3). This mark must measure exactly 2-3/8" or 2-3/4" from the edge of the door. (NOTE: many exterior doors are 2-3/4" backset and may not match other doors on project.)

③ Drill a 2-1/8" diameter hole through the door face centered on the mark. Drill halfway through the door from each side to prevent splitting.

④ Drill a 1" diameter hole in the center of the door edge as marked.

⑤ Install lock set by following the Bravura Quick-Install Instructions.

✂ Cut along solid lines

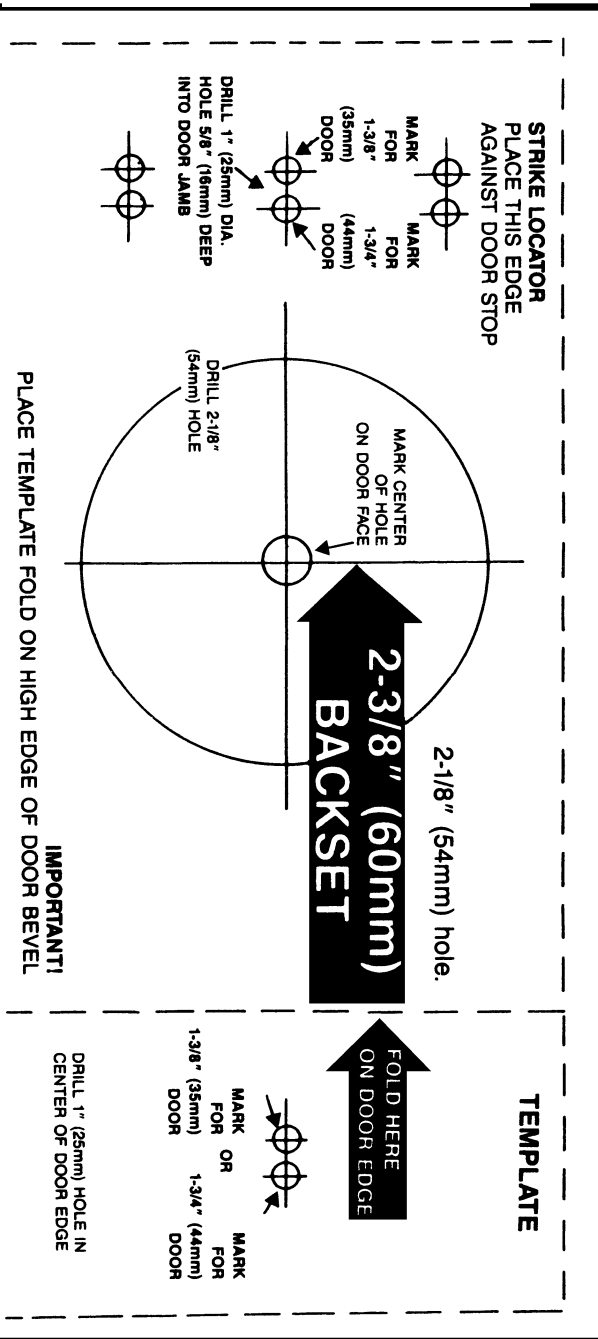

↔5) Locate the notch on the bottom of the interior lock body (figure 5a). **MAKE CERTAIN THIS**

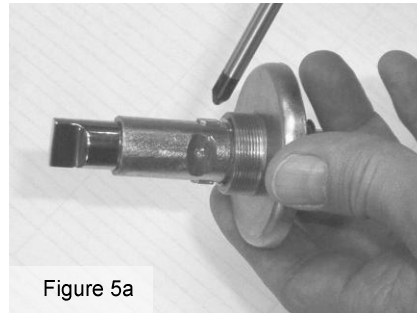


Figure 5a

NOTCH IS FACING DOWN DURING INSTALLATION.

Install the interior lock-body onto the door while holding the exterior half of the lockset (figure 5b). If interior lock-body does not slide-on easily, rotate the privacy button 90 degrees and try again (button should be either horizontal or vertical).



Figure 5b

CAUTION: DO NOT FORCE THE LOCK-BODY ONTO THE DOOR!!

Insert two 1 1/4" long machine screws (supplied) into the interior lock-body (figure 5c) and tighten (loosely). Before you fully-tighten these screws, make certain they are at exactly 12:00 and 6:00, and the lock-body is not binding on the latch mechanism. Check for proper lock function by turning the outside knob/lever and privacy button. With the button horizontal, the exterior lever/knob should turn. With the button vertical, the exterior lever/knob should be locked. Perform the same test with the key.



Figure 5c

Figure 6a



↔6) Re-install the interior rosette by turning clockwise (figure 6a).

Tighten as snugly as possible by hand. **DO NOT USE ANY TOOLS TO TIGHTEN THE ROSETTE, AS THIS WILL CAUSE DAMAGE TO ITS FINISH.** Slide the interior knob/lever onto the lock-body, and tighten the two hex screws (figure 6b). Check for proper

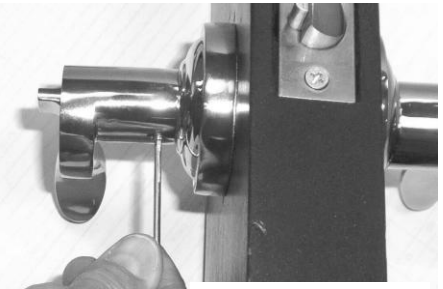


Figure 6b

lock function by turning the inside and outside knob/lever, and privacy button.

↔7) Mortise door jamb for strike-plate (provided), and mount using the included wood screws.

Bravura

9190 Corporation Drive, Indianapolis, IN 46256

Phone: 800-276-1104 ↔ Fax: 317-598-1020