

Bravura

Quick-Install Instructions Keyed Entry with 1 (rectangular) and (arched) Escutcheons

→1) Use template on the bottom of the back page to drill the mounting holes.



Figure 1

→2) Adjust latch backset to fit your door, 2 3/8" or 2 3/4" (figure 1). Insert latch mechanism into door. Attach latch-face with provided wood screws (figure 2).

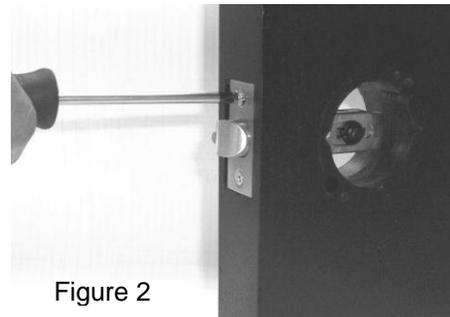


Figure 2



Figure 3

→3) Insert the exterior half (with cylinder) of the lockset into the door (figure 3). If you need to remove the exterior lever/knob for re-keying, call 1-800-276-1104 for instructions.

→4) Loosen the set-screw (tool provided) on the knob/lever on the interior half of the lockset (figure 4a) and remove knob/lever (keep in box/bag to prevent damage). Remove the beveled collar by rotating it counter-clockwise by hand. Turn the notched bezel on the escutcheon counter-clockwise with provided tool, and remove the bezel and escutcheon. You will now have the interior lock-body.



Figure 4a



Figure 4b

You will now have the interior lock-body.

INSTRUCTIONS FOR INSTALLATION ON NEW WOOD DOORS

① Cut out the template and fold it along the dotted line. Place the folded template against the edge of the door so that the mark (#2) is approximately 38" above the floor. Mark the center of the door edge using the correct location for your door thickness. (NOTE: deadbolt should be 5.5" above door lock.)

② Still holding the template in place, mark the center of the door face hold (#3). This mark must measure exactly 2-3/8" or 2-3/4" from the edge of the door. (NOTE: many exterior doors are 2-3/4" backset and may not match other doors on project.)

③ Drill a 2-1/8" diameter hole through the door face centered on the mark. Drill halfway through the door from each side to prevent splitting.

④ Drill a 1" diameter hole in the center of the door edge as marked.

⑤ Install lock set by following the Bravura Quick-Install Instructions.

Cut along solid lines

→ 5) Locate the notch on the bottom of the interior lock body (figure 5a). **MAKE CERTAIN THIS**

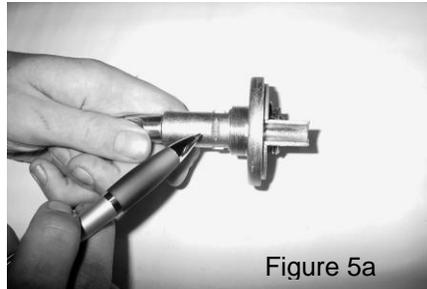


Figure 5a

NOTCH IS FACING DOWN DURING INSTALLATION. Install the interior lock-body onto the door while holding the exterior half of the lockset (figure 5b). If interior lock-body does not slide-on easily, rotate the privacy

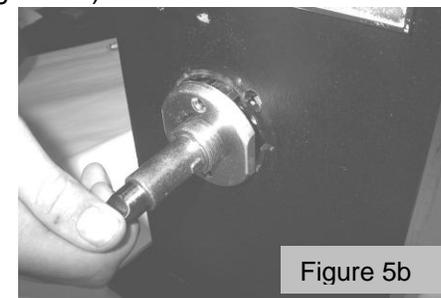


Figure 5b

button 90 degrees and try again (button should be either horizontal or vertical). **CAUTION: DO NOT FORCE THE LOCK-BODY ONTO THE DOOR!!** Insert two 1 1/4" long machine screws (supplied) into the interior lock-body (figure 5c) and tighten (loosely). Before you fully-tighten these screws, make certain they are at exactly 12:00 and 6:00, and the lock-body is not binding on the latch mechanism. Check for proper lock function by turning the outside knob/lever and privacy button. With the button horizontal, the exterior lever/knob should turn. With the button vertical, the exterior lever/knob should be locked. Perform the same test with the key.

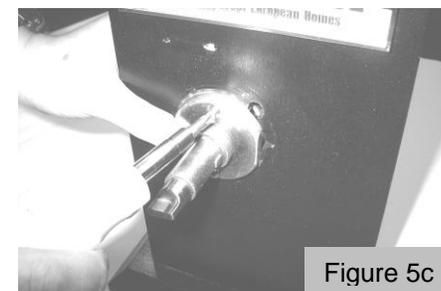


Figure 5c

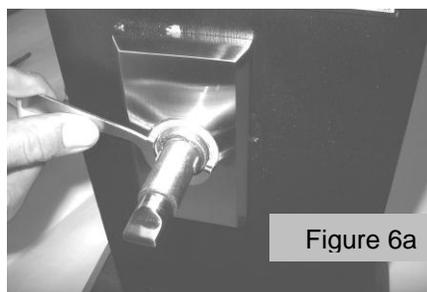


Figure 6a


→ 6) Re-install the escutcheon, and fix into position with the notched bezel (Figure 6a) (tool provided). Install the beveled collar by hand, and tighten as snugly as possible (Figure 6b). **DO NOT USE ANY TOOLS TO TIGHTEN THE BEVELED COLLAR, AS THIS WILL CAUSE DAMAGE TO ITS FINISH.**



Figure 6b

Slide the interior knob/lever onto the lock-body, and tighten the hex screw (tool provided). Check for proper lock function by turning the inside and outside knob/lever, and privacy button.

→ 7) Mortise door jamb for strike-plate (provided), and mount using the included wood screws.

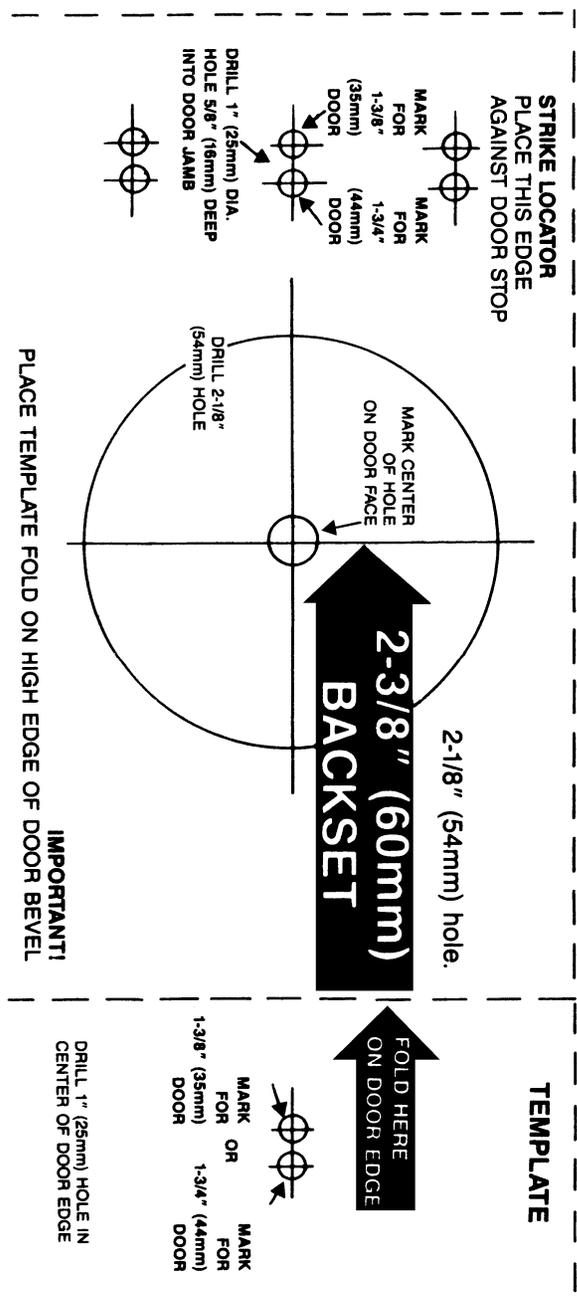

Bravura

9190 Corporation Drive, Indianapolis, IN 46256

Phone: 800-276-1104 → Fax: 317-598-1020